

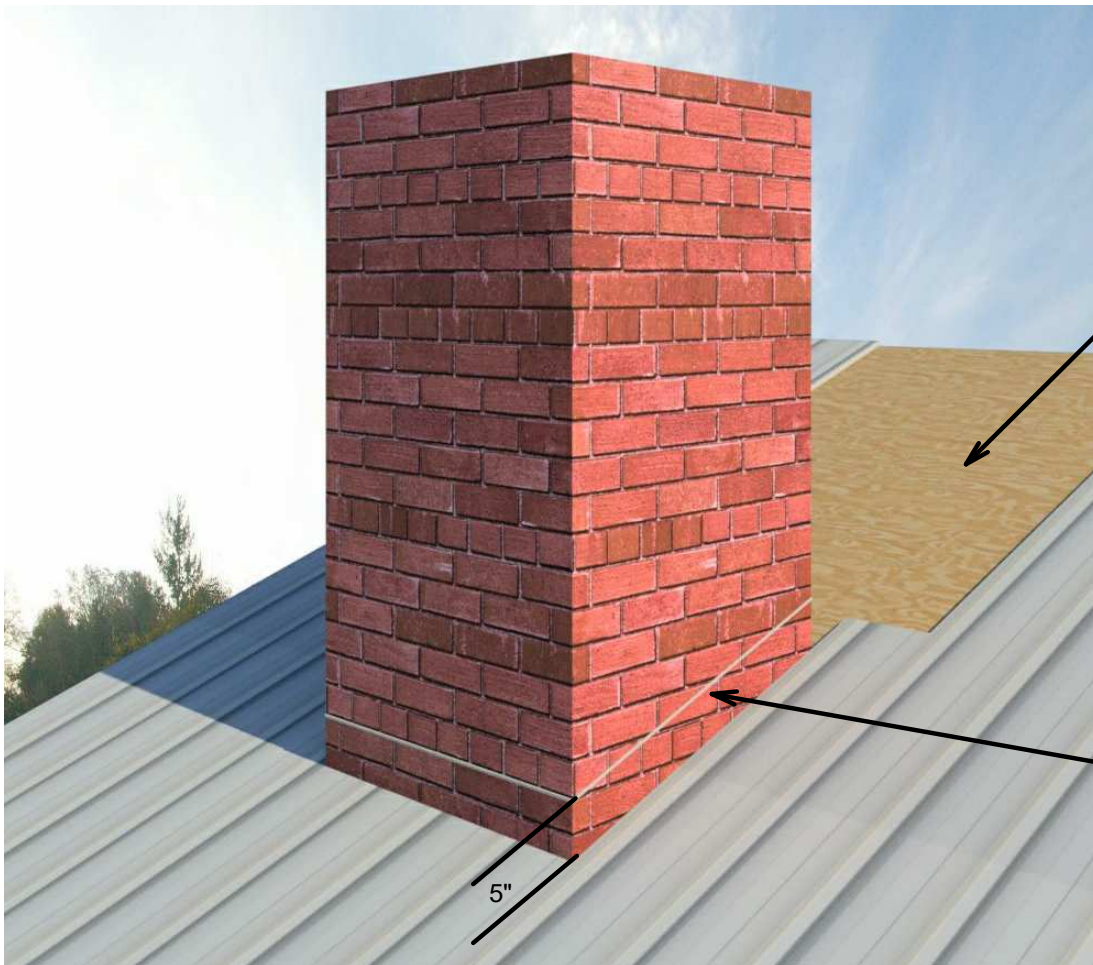
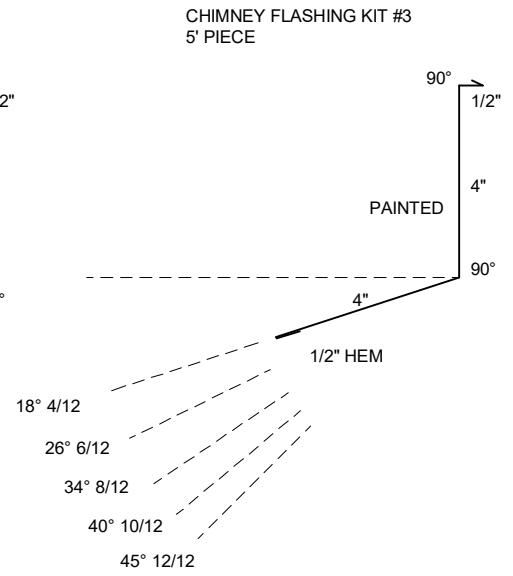


# ***DC-Rib Chimney Flashing Installation Manual***

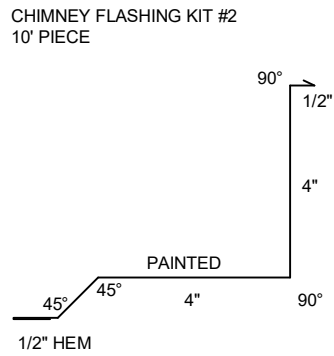

**800.279.4299**

**[www.dcmetal.com](http://www.dcmetal.com)**

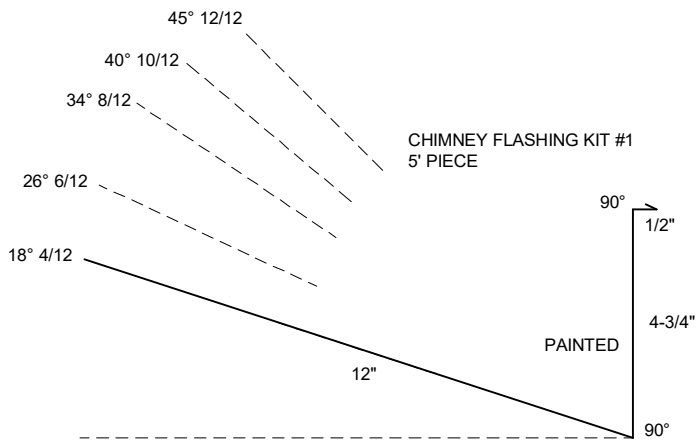

Step 1: When installing metal do not install piece above chimney.

Step 2: Cut a 1/4" groove into the chimney 5" above the plane of the roof 1-1/4" deep.

Step 3: Install bottom trim piece. Fasten to ribs.



Step 4: Install side trim.





Step 5: Install top trim piece.



Step 6: Install flat trim and extend to next metal splice.

Step 7: Apply 2 beads of caulk or butyl tape on flashing.



Step 8: Install metal panels above the chimney. Caulk all high side trim.